

140*105MM



RHYTHM
Tune In, Lose Yourself



USER MANUAL

Please refer to this manual before using the product

INTRODUCTION

Welcome to the Green Rhythm headphones, your ultimate wireless Audio companion. Designed to deliver 20 hours of uninterrupted playtime, These headphones ensure you stay immersed in your music all day long. Equipped with powerful 40mm drivers, the Green Rhythm headphones Offer high-fidelity bass and crisp stereo sound, perfectly balancing melody And depth. Experience sound like never before with a product that Combines endurance and exceptional audio quality.



LED light.

CHARGING

Before using your Green Rhythm headphones, please make sure to charge them using the included Type-C cable. This will ensure optimal performance and battery life from the very start. Simply connect the cable to a power source and your headphones, and you'll be ready to enjoy high-quality sound in no time.

PARING

POWER ON: Press and hold the multifunctional button on your Green Rhythm Headphones for 3 seconds. The blue light will turn on, indicating that Bluetooth is in pairing mode.

ENABLE BLUETOOTH: On your cell phone, tablet, or other Bluetooth-enabled Device, make sure Bluetooth is turned on and set to search for new devices.

SELECT DEVICE: In the list of available devices, select "Green Rhythm" to pair With your headphones.

ON/OFF

- On: Long press the multifunctional button for 3 seconds.
- Off: Long press the multifunctional button for 3 seconds.

PLAY/PAUSE:- Short press the multifunctional button to play or pause music.

VOLUME UP:- Long press the '+' button to increase volume.

VOLUME DOWN:- Long press the '-' button to decrease volume.

NEXT SONG:- Short press the '+' button to skip to the next song.

PREVIOUS SONG:- Short press the '-' button to go to the previous song.

ANSWER CALL:- Press the multifunctional button once when a call is incoming.

END CALL:- Press the multifunctional button again to end the call.

REDIAL:- Double press the multifunctional button to redial the last number.

TF CARD USAGE:- When the headphones are powered on and Bluetooth is disconnected, insert a TF card to play music directly.

LISTEN TO RADIO PROGRAMS:- Press the multifunctional button three times to start automatic radio search. Press the button again to manually search for stations and confirm your selection (the blue light will flash).

WARNING

Please do not place the product in an environment where the temperature is too low & high (above 45°C or below 0°C).

Do not dismantle or repair the headphone under any circumstances, if necessary, please send the product to the seller for repair.

Do not throw and drop the headphone to avoid damage.

The headphone and the BT devices will be disconnected if the distance between them is more than 10 meters.

Keep the device and accessories away from children and pets.

Do not put the earbuds into the washing machine.

BATTERY WARNING

The battery in the product may cause fire disaster or risk of chemical burning if mishandled. Please charge with a rated voltage charger.

The discard of battery should obey local law, if possible please recycle it. Do not dispose it as household garbage, because it may cause a explosion.

Users are not allowed to take out or replace battery in the product unless there is a stipulation on user manual. It is very hazardous to do this, may cause a damage to prodct.