


62mm*92mm




MELODY-30
Melody That Moves You

USER MANUAL

Box Content


- Melody-30
- Type-C cable
- AUX cable
- User Manual
- Catlogue/Warranty Card

Operation

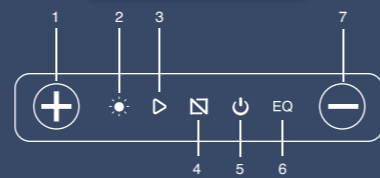

- Press once for next song and long press for volume up.
- Short press to change light modes.
- Short press to pause/play the music.
- Short press mode conversion : BT mode , TF card, USB mode, FM mode
- Long press to turn ON/OFF.
- Short press to change into bass boosted mode.
- Press once for previous song and long press for volume down.

Operation

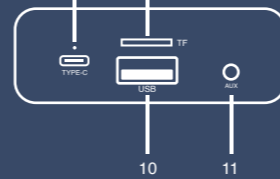


- Use the dedicated Type-C power cord provided with this device to connect the charging jack to a mobile phone charger.
- Insert TF card to play MP3 music.
- Insert USB disk to play MP3 music.
- AUX IN port

How To Use?

⏻ Long press to power on/off

Pair With Your Device



Specifications

Model No	: MELODY-30
Wireless Version	: Bluetooth 5.4V
Working Distance	: 10 meter
Speakers Size	: 57 mm x 2
Output Power	: 15W x 2
Battery Capacity	: 2000 mAh x 2
Play time	: 6 hrs (On 80% volume)
Charging time	: 2.5 hrs
Radio frequency	: 120Hz-20k Hz
Product Size	: 236 x 103 x 103 mm
Weight	: 1510 gm

Charging Instructions

Connect charging cable to the 5V/2A mobile phone charger for charging. The battery indicator is solid on during charging, and indicator not flash when fully charged.

Warning

- Do not use any fast charger or PD charger or GaN charger or quick charger exceed 5V output.
- MELODY-30 is water resistance speaker, but do not expose it to water while charging As doing somay result in permanent damage to the speaker or power source.

Attention

- Use Original or certified cables
- Don't expose to liquids
- Don't disassemble
- Avoid dropping
- Avoid extreme temperatures