

100mm*100mm

GREEN

USER MANUAL



ORBIT PRO
ELEVATE YOUR WRIST WITH RICHNESS AND INTELLIGENCE.

GREEN

App Download Process


To pair the watch with your device:
Scan the QR Code or Download the "GloryFitPro" App:
You can find the app on the App Store or Google Play Store.
System Requirements:
• iOS: Version 9.0 or above.
• Android: Version 5.0 or above.
• Bluetooth: BT 5.0 is supported.



Scan QR code for download and install "GloryFitPro"

GREEN

Appearance

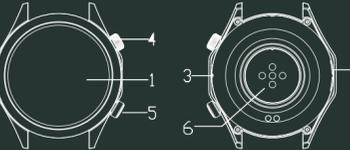

1. Touch screen
2. Speaker
3. Microphone
4. Power Button
5. Keyboard shortcuts
6. Heart Rate Sensor

GREEN

Button Description

When the watch is off, follow these steps to turn it on:

1. **Charge the Watch:** Connect it to its charger, and it will automatically turn on.
2. **Long Press for 3 Seconds:** Press and hold the power button for 3 seconds. The watch will vibrate and turn on.

When the watch is on, follow these steps to turn it off:

1. Long press the power on/off button, slide the power off button.

Band Operation:


1. **Screen Control:** Slide to light up or switch the display. Screen Timeout: Default: 5 seconds. Modify via the mobile app.
2. **Heart Rate Monitor:** Default: 24-hour monitoring. Turn on/off in app settings.

GREEN

Charging and Active

Please charge the smartwatch before first use:

1. **Connect Charger:** Plug the charging cable into any USB port adapter (computer or charger).
2. **Charging Time:** It takes about 2 hours to fully charge.
3. **Magnetic Charge Port:** Ensure the magnetic charge port is aligned correctly.

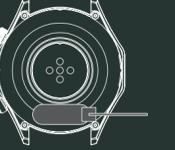

GREEN

Wearing the Watch

In general, it's always important to give your wrist a break on a regular basis by removing your watch for around an hour after extended wear. We also recommend removing your watch while you take a shower, steam may damage your devices.
Note: Not suitable for steam sauna swimming & shower. Please remove the films from the screen and the backplate heart rate lens.

How to connect

Open the APP, click "Device" "Add Device" "Select Device", click the corresponding model, and follow the prompts to connect (see the operation) Demands on Device: IOS 9.0 or above; Android 5.0 or above. BT 5.0 is supported.



GREEN

BT Connection

Pairing:

After successful pairing, the app will automatically save the watch's BT address. When the app is opened or runs in the background, it will automatically search for and connect to the watch.


Data Synchronization:

Manually swipe down the app's main page to synchronize data. The watch can save offline data for 7 days. The more data there is, the longer the synchronization time, but it will take no more than 2 seconds to synchronize. After synchronization, "synchronization finish" will pop up.

Contacts Sync:

Enter the BT terminal settings in the phone's background and open synchronized contacts (see Next page for operation).

GREEN

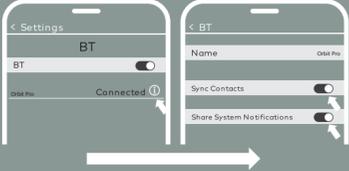

Unbind Device

Open APP>Device>Slide to the bottom >Unbind> OK

GREEN

Smart Watch Features

Main Interface Features:

- BT Calling
- Training
- Status
- Blood Oxygen
- Sleep
- Message
- Heart Rate

Switching Dial:
On the main interface, press and hold the watch for two seconds to switch the dial left and right. The watch will vibrate.

Time Sync:
The watch synchronizes time, date, and week after connecting with the phone.

Calls:
You can make or answer calls directly on the watch.

View Information:
Slide up on the main interface to view recent messages pushed by the app. If there are no messages, it stops at the message interface.

GREEN

Slide right to exit and return to the previous interface. Automatically deletes already viewed information. There is an "All Delete" option at the bottom. Slide down to return to the main interface.

Heart Rate Monitoring:
Switch to the heart rate interface to start automatic heart rate Monitoring.

Training:
Click to enter the sports interface, multiple sport modes, select a specific sports item, click to start monitoring after three seconds, press the upper corner button or slide to the right to pause, click "√" to end.

Status:
Switch to the status interface to view the current step count, distance, and calorie status. The distance and calories are calculated and displayed according to the current walking steps, the height and weight set by the APP personally.

GREEN

Blood Oxygen:
Switch to the blood oxygen interface to start automatic measurement of blood oxygen, and switch the menu to re-measure.

Sleep:
Switch to the sleep interface, you can check the sleep quality of the previous night.

Weather:
Switch to the weather interface, you can view the weather and temperature conditions.

Music:
After successfully connected with the paired APP "GloryFitPro" when the phone playing the music the watch can control the music such as pause, previous and next.

Alarm Clock:
Enter the alarm clock interface, you can add or delete alarm clocks and set up multigroups of alarm clocks.

GREEN

Respiration Rate:
Enter the breath test interface start to measure the breath rate. Automatically. Switch the menu to re-measure.

More:
Stopwatch: Click to start timing, swipe to the right to exit back to the previous interface when the timing is stopped.

Timer:
Switch to the timer interface, you can choose to set the time or add a custom time. Find a mobile phone: Switch to the search interface, click to find a mobile phone in the connected state, and the mobile phone will send a ringtone to remind you.

Flashlight:
Click in and out to turn on the flashlight, swipe right to turn it off.

Calculator:
Click to enter and exit the calculator function interface, swipe right to exit.

GREEN

Set Up:
Watch face: Click this interface to switch the watch face left and right, and click to select the watch face.
Brightness adjustment: Click to select different brightness, there are four levels of brightness.

Bright screen duration adjustment:
Click to select the bright screen duration, which are 5 seconds, 10 seconds, 15 seconds, 30 seconds and 60 seconds.

Theme:
Click this interface to choose from the interaction modes.
Sound setting: Click to enter the sound setting interface, you can choose to turn on or off the entertainment/call ringtone.

About:
Click this interface to view the firmware version number and Bluetooth address of the bracelet.

Factory reset:
Click this interface to choose factory reset (clear all data) or cancel.

GREEN

Shutdown:
Click this interface to select shutdown.

Password:
Click this interface to set or modify the password. If you forget the password, you can connect to the mobile APP, and restore the Device on the mobile APP to remove the password.

Disposal & Recycling:
Please kindly be aware that it is the consumer's responsibility to properly dispose and recycle smart watch and accompany components. Do not dispose of Smart watch with common household waste. The Smart watch unit is considered electronic waste and should be disposed at your local electronic equipment collection facility. For more information, please contact your local electronic equipment waste management authority or the retailer where you bought the product.

GREEN

Specifications

Display Type	: 1.43" AMOLED
Resolution	: 466*466
Battery Capacity	: 270mAh
Standby Time	: Approximately 20 Days
Working Hours	: Light use about 7 Days, Heavy use About 3-5 Days
Battery Type	: Lithium Polymer
Charging Type	: Magnetic Charging
Charging Time	: 2 Hours
Water Resistance	: IP68
Body	: Metallic, Zinc Alloy
Screen Cover	: Hard Glass
Wrist Size	: 22mm

GREEN

Caution

1. Risk of explosion if battery is replaced by an incorrect type, dispose of used batteries according to the instructions. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
2. EUT Temperature: -20°C~+50°C (Standalone), 0°C~+40°C (with adapter)



High sound pressure with hearing damage risk. Do not listen at high volume levels for long periods.